



How to perform a quick test

STEP 1: How to test:

Connect the red test clamp to the battery positive (anode) and black to battery negative (cathode), the SPTG1 then will power on automatically. After the display illuminates press OK key to continue.



STEP 2:

The display menu will allow for the following choices, you can press UP/DOWN key to choose the desired option:

- 1) Battery Test
- 2) Starting System Test
- 3) Charging System Test
- 4) Review Data
- 5) Print Data
- 6) Language



STEP 4:

Input rated capacity: you can see the starting current standards of the battery, such as CCA/800A. This is usually listed on the battery label. Note: This determines the threshold for Pass/Fail based on battery specifications. Inaccurate setting of this target can cause incorrect Pass/Fail results. Then press OK key to start testing Follow the prompts on the display for Starting Test and Charging System Test Once testing is complete, select 4.

Review Data to see the results

STEP 3: Battery Test

Select the battery test and press OK key to continue:

