

Connect wiring harnesses as required, checking all connections before moving on to next stage of installation.



Insert metal bracket (Cage) into place as above.



Insert new head unit.



Put modified panel back in place.



Replace storage panel and refix with screws. Put new head unit trim into place.

For Technical Support Contact:

0900 1020 119*

E: technical@armourauto.com

*Calls cost 60p per minute. Opening hours: 9:00am - 5:00pm Mon-Thu, 9:00am - 1:00pm Fri.
Mobile phone costs vary, maximum call charge of £5.00.
Please ask permission of the bill payer before calling.

Armour Auto is the trading name of Armour Automotive Ltd, whose registered office is:
Lonsdale House, 7/9 Gardens, Tunbridge Wells, Kent, TN11 1PU Reg No: 2560438 England
Part of Armour Group PLC

AUTOLEADS

Installation Manual For:
DFP-31-01

Hyundai I30 2007 Onward




Installation kit includes the following items:

- 1x 2-ISO 100mm Metal Bracket
- 1x Radio Trim
- 2x Mounting plates
- 2x Mounting spacers
- 4x Screws
- 2x Radio keys

Note: Assembly time 2hrs approx

Autoleads is a brand of Armour Automotive
Woolmer way, Bordon, Hampshire, GU35 9QE
T: +44 (0) 1420 476 767 F: +44 (0) 1420 477137 E: info@armourauto.com
www.armourauto.com

Please note: This manual is intended as a guide only. Mounting bracket positioning and OEM panel trimming requirements will differ dependent upon aftermarket head unit choice. Autoleads & Armour Automotive accept no responsibility for damage caused during product installation.

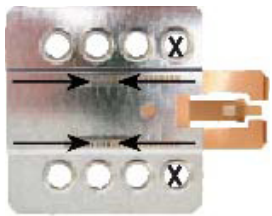

Set slider on mounting plate to correct position for fitting, we suggest using positions 8 - 10.



For standard fitting secure mounting plate to head unit using holes as illustrated above. Other holes are available and can be used if required.



Mounting plate should be attached to head unit as illustrated above.



Remove securing screws in storage panel as indicated by arrows above. Remove storage panel.



Remove dashboard panel around the OEM head unit. Note: May require prying, take care not to damage panel during removal*.



Remove OEM head unit. Unit is secured with 4 screws.



Dash should now look like this.



Taking care, trim OEM panel to correct size for the new head unit.



Panel should now look similar to the above.

*We recommend BOJO trim tools - visit: www.autoleads.co.uk